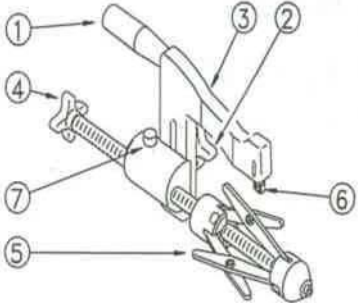
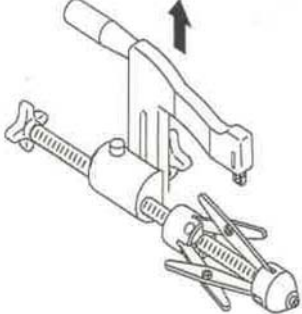
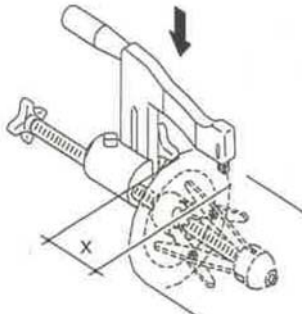
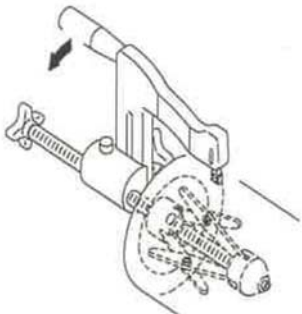
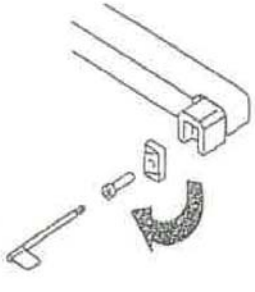
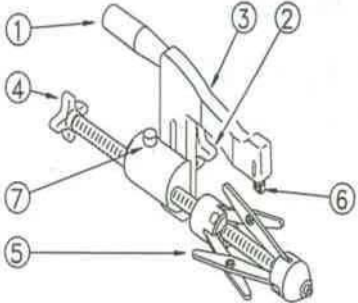
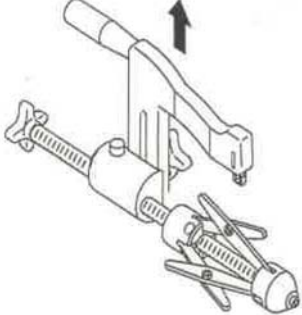
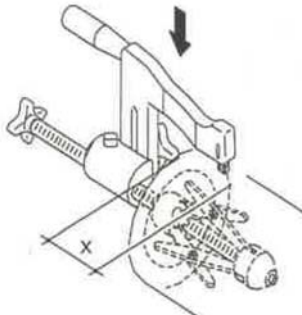
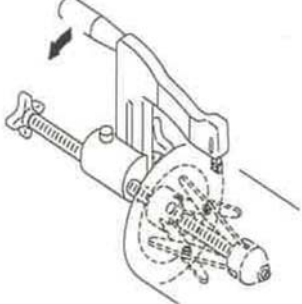
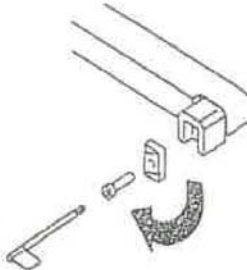


RASPADOR ROTATORIO Ø75-180 PARA TUBOS DE PE-AD/PE-X/PP/PP-R

	<p>1.- Empuñadura 2.- Pomo de ajuste del soporte 3.- Soporte desplazable 4.- Pomo de fijación del expansor 5.- Expansor 6.- Cuchilla 7.- Ajuste de profundidad de raspado</p>
	<p>¡Atención! Antes de continuar y para evitar daños a la cuchilla, asegurarse de que el soporte desplazable (3) está en la posición superior.</p>
	<p>Insertar el expansor (5) del raspador en el tubo/accesorio y girar el pomo 4 en sentido horario hasta que el raspador quede sujeto al tubo.</p> <p>Ajustar la profundidad de raspado pulsando el botón de ajuste (7) y desplazando según se requiera el soporte desplazable (3) adelante o atrás.</p> <p>Bajar el soporte (3) hasta que la cuchilla esté en contacto con el tubo y su muelle ligeramente comprimido. Fijar el soporte mediante el pomo 4.</p>
	<p>Proceder a raspar haciendo firmemente la empuñadura (1) y girando el conjunto en sentido horario.</p>
	<p>La cuchilla (6) dispone de dos filos. Desmontar y girar 180º para usar el segundo filo cuando el primero este gastado o deteriorado.</p> <p>Reemplazar la cuchilla cuando sea necesario.</p> <p>La vida de la cuchilla dependerá del material (HDPE, PE-X, PP, PP-R), uso, cuidados y condiciones ambientales.</p>

PIPE SCRAPER Ø75-180 FOR PE-HD/PE-X/PP/PP-R PIPES

	<p>1. Handle 2. Hand wheel for bracket adjustment 3. Bracket 4. Insert locking knob 5. Pipe locking expander 6. Blade 7. Scraping depth button</p>
	<p>Warning! Make sure that the bracket 3 is in the top position before starting any operation.</p>
	<p>Insert the tool into the pipe or into the fitting by turning knob 4 clockwise.</p> <p>Adjust the scraping depth X pushing the button 7 and moving the main body 3 ahead and back.</p> <p>Lower the bracket 3 until the blade is put on the pipe. The arm must be parallel to the pipe by blocking it by hand wheel 2.</p>
	<p>Then proceed by scraping the end of the pipe. Keep the handle 1 firmly and turn the body constantly clockwise.</p>
	<p>The blade 6 can be turned in order to use the second sharp.</p> <p>Otherwise it can be replaced unscrewing it by the supplied service key.</p> <p>The blade durability changes depending on the intensity of the use and ambient reason.</p>